



## Changing the Projector Orientation

To correct a projector if it is projecting upside down, backwards, or otherwise disoriented:

1. Press the **Menu** button on the projector.
2. Press the up/down arrows until **Option** is highlighted.
3. Press the enter button (the center button).
4. Locate the **Installation** tab on the right.
5. Press the left/right arrow buttons until the orientation is normal.

